



Yealink Connection Guide

Compatible Desk Phones:



YEALINK

Yealink T26P
Yealink T27P
Yealink T28P
Yealink T28+EXP39
Yealink T38G SIP
Yealink T41P
Yealink T42G
Yealink T46G
Yealink T48G


W9xx Base Layout:

A. Universal base station

- | | |
|----------------------------|-------------------------------------|
| 1. Battery Indicator | 7. EHS port |
| 2. PC button | 8. Telephone connector ('Tel' port) |
| 3. Telephone (TEL) button | 9. Handset connector |
| 4. Online indicator | 10. EHS Selection switch |
| 5. USB connector (PC port) | 11. Microphone volume up/down |
| 6. Power socket | 12. Wiring switch |

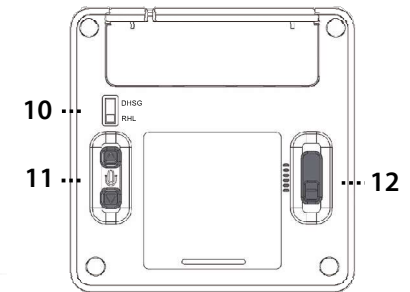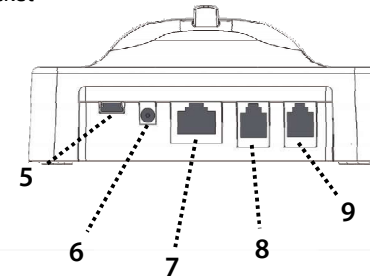

Step 1. Switch EHS Selection Switch to DHSG Setting

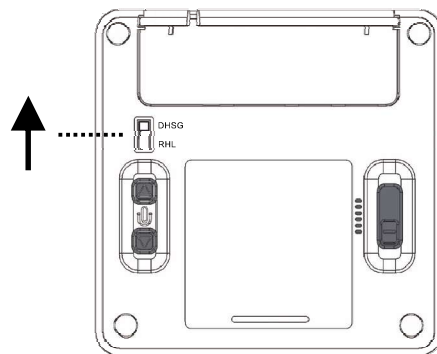

Step 2. Connect the R9 Curly cord supplied with your Yealink EHS Box from the TEL port on the Headset base to the Headset port on the telephone

Step 3. Connect the Yealink RJ45 Cord to the EHS port on the Headset base and to the Yealink EHS Box

Step 4. Connect Yealink EHS Box to the EXT port on the Yealink telephone using the RJ12 cord

