



Snom Connection Guide

Compatible Desk Phones:



SNOM

Snom 300
Snom 315
Snom 320
Snom 345
Snom 360
Snom 370
Snom 375
Snom 820
Snom 821
Snom 870


W9xx Base Layout:

A. Universal base station

- | | |
|----------------------------|-------------------------------------|
| 1. Battery Indicator | 7. EHS port |
| 2. PC button | 8. Telephone connector ('Tel' port) |
| 3. Telephone (TEL) button | 9. Handset connector |
| 4. Online indicator | 10. EHS Selection switch |
| 5. USB connector (PC port) | 11. Microphone volume up/down |
| 6. Power socket | 12. Wiring switch |

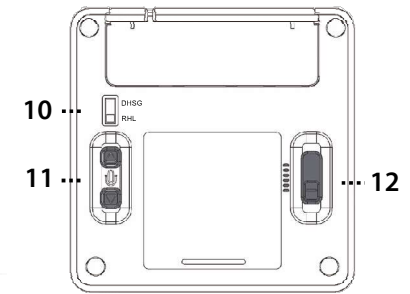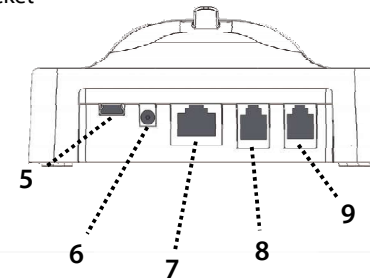

Step 1. Switch EHS Selection Switch to DHSG Setting

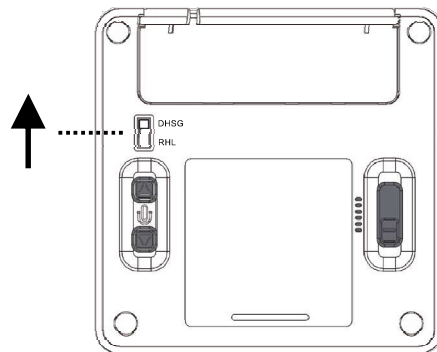

Step 2. Connect the headset cable from the TEL port on the Headset base to the Headset port on the telephone

Step 3. Connect the SNOM RJ45 Cable (E) to the EHS port on the Headset base and to the SNOM EHS Box

Step 4. Connect SNOM EHS Box to the Snom telephone using the correct cable for your model. Refer to Snom EHS instruction for details.

